

## Traditional Fryer

- Heating under bowl
- Food Crumbs burn

**STARTER**

**FF 1200 Fun Fryer**  
1400 Watt  
1,5 L - 0,8 Kg  
Artn° 141510

**5** GARANTIE  
1-2 PERSONS



FRYING

## Cool Zone

- Heating in the oil
- Food Crumbs don't burn

**STARTER**

**FR 1355 Fryer**  
2200 Watt  
3 L - 1,1 Kg  
Artn° 141001

Inox

**10** GARANTIE  
2-4 PERSONS  
COOL ZONE

**STARTER**

**FR 1450 Fryer**  
2200 Watt  
3 L - 1,1 Kg  
Artn° 141053

Inox

**10** GARANTIE  
2-4 PERSONS  
COOL ZONE

**STARTER**

**FR 1455 Fryer**  
2200 Watt  
3 L - 1 Kg  
Artn° 141008

FILTER

Inox

**10** GARANTIE  
2-4 PERSONS  
COOL ZONE

**STARTER**

**FR 1465 Fryer**  
2600 Watt  
4 L - 1,25 Kg  
Artn° 141022

FILTER

Inox

**10** GARANTIE  
3-5 PERSONS  
COOL ZONE

**STARTER**

**FR 1480 Fryer**  
3000 Watt  
4 L - 1,35 Kg  
Artn° 141040

Inox

**10** GARANTIE  
3-5 PERSONS  
COOL ZONE